
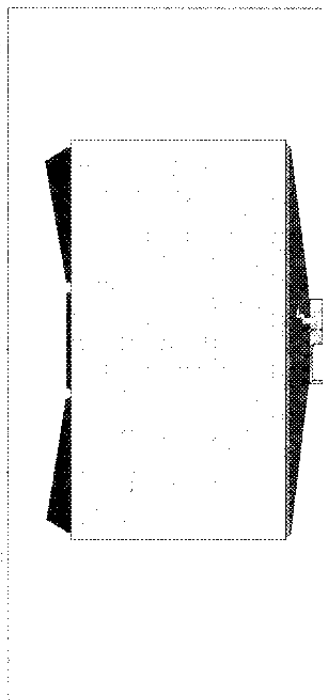
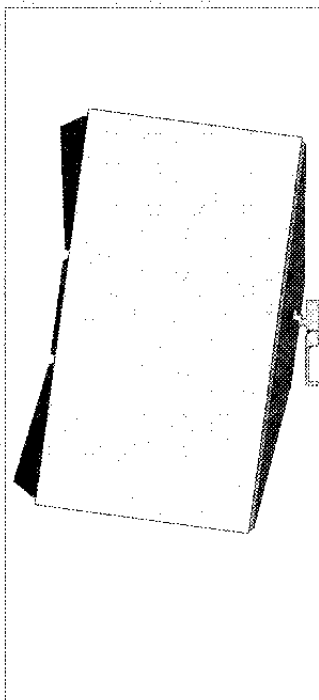





**BANG & OLUFSEN**

**B E O V O X   C X 1 0 0 / C X 5 0**

# CX 100

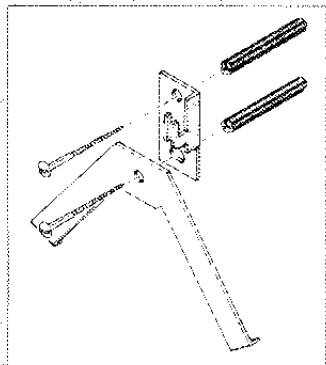

# CX 50

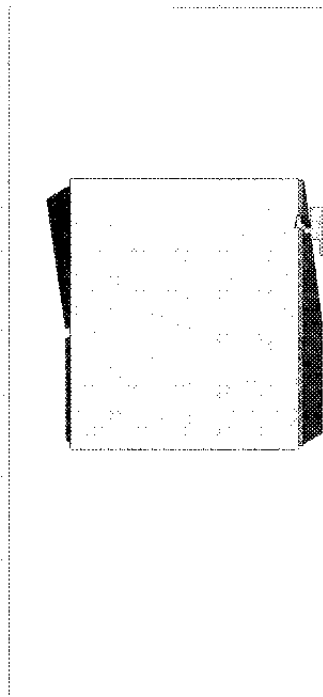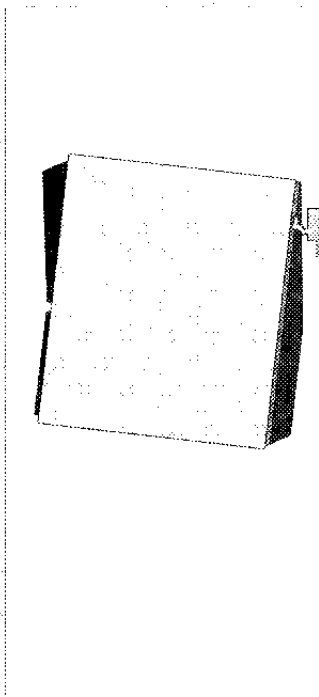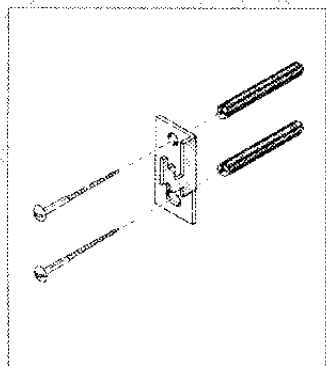

*The BeoVox CX100/CX 50 can be used in e.g. a bathroom. Unless otherwise stated (in the Setting-up guide), this does not apply for other Bang & Olufsen products!*

The enclosed accessories must be used for mounting the loudspeakers on *solid walls* only. To make sure that the loudspeakers can be hooked on to the wall bracket, the distance between the upper edge of the bracket and the ceiling must be at least 15 cm – 6" (BeoVox CX 100) or 7.5 cm – 3" (BeoVox CX 50).

BeoVox CX100/CX50 מתאים לשימוש בחדר אמבטיה, למשל. אם לא נאמר אחרת (במדריך ההתקנה), הדבר אינו נכון לגבי מוצרים אחרים מתוצרת **Bang & Olufsen**!

האבזרים המצורפים מתאימים לתליית רמקולים על קירות מוצקים בלבד. כדי להבטיח שאפשר יהיה לתלות את הרמקול על זווית התלייה, המרחק בין הקצה העליון של זווית התלייה לתקרה חייב להיות לפחות 15 ס"מ (BeoVox CX100) או 7.5 ס"מ (BeoVox CX50).

